


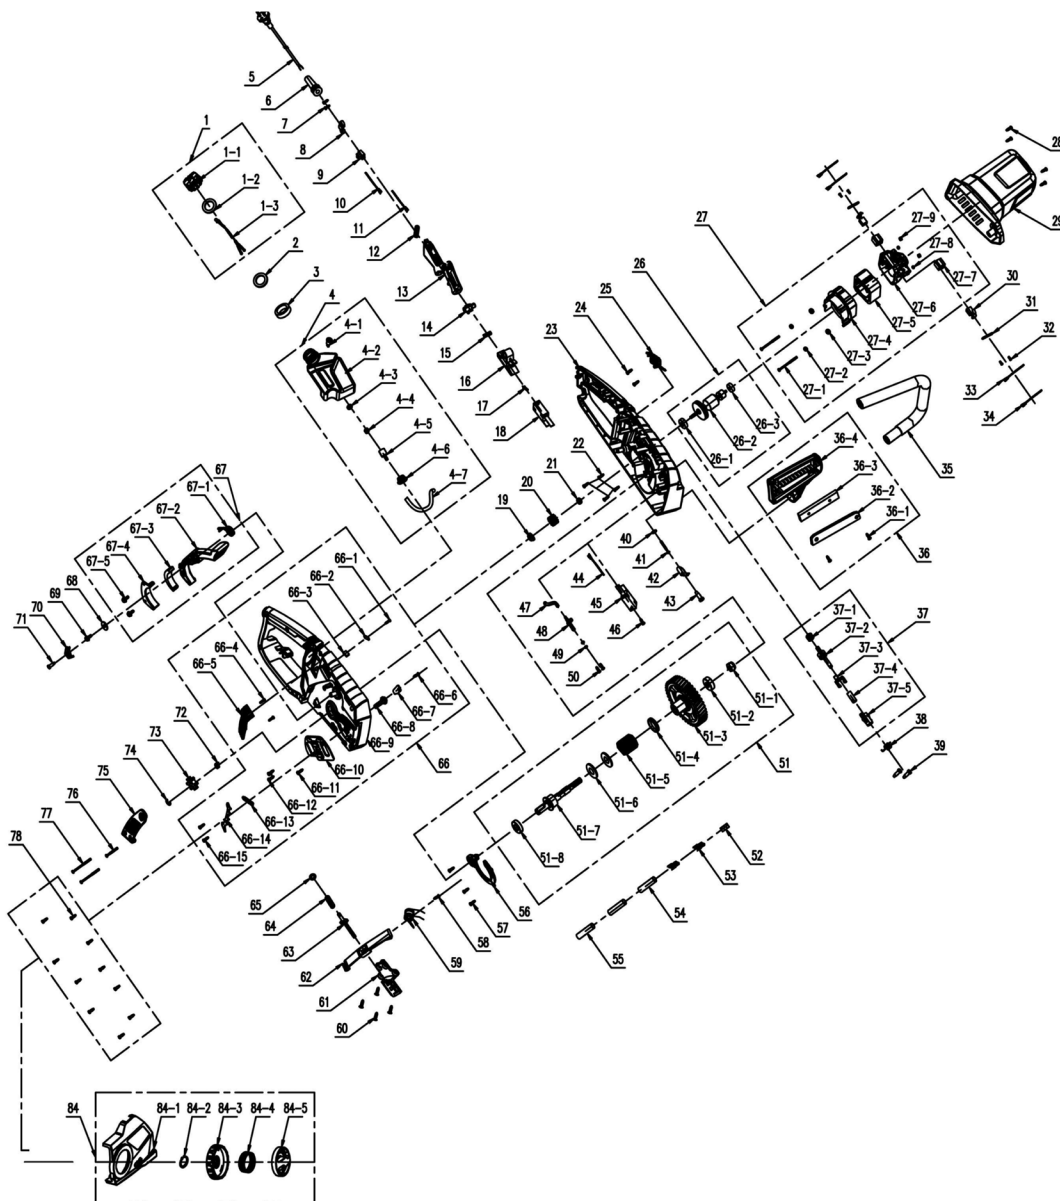

NO.	Name	Kit Part Number	Quantity	NO.	Name	Kit Part Number	Quantity
1	Oil box cap assembly	Oil cap kit 570967	1	41	Self tapping screw		1
1-1	Oil box cap	See item 1 kit 570967	1	42	Connecting rod clamp		1
1-2	Seal ring	See item 1 kit 570967	1	43	Self tapping screw		1
1-3	Hanger	See item 1 kit 570967	1	44	Connecting wire		1
2	Rubber washer		1	45	Brake switch	NA Brake switch kit 571068 EU Brake switch kit 572392	1
3	Sponge gasket		1	46	Self tapping screw		1
4	Oil box assembly		1	47	Transparent oil tube		70mm
4-1	Valve		1	48	Out of the nozzle		1
4-2	Oil tank		1	49	Rubber ring		2
4-3	Oil box joint core plug		1	50	Self tapping screw		2
4-4	Sponge		1	51	Output shaft assembly		1
4-5	Oil box direct joint		1	51-1	Lock nut		1
4-6	Oil box seal ring		1	51-2	608Z bearing		1
4-7	Transparent oil tube		170mm	51-3	Output shaft gear		1
5	Power cord Leoni	NA Power cord kit 571065 EU Power cord kit 571066	1	51-4	Spindle cover		1
6	Cable sleeve		1	51-5	Torsional spring		1
7	Self tapping screw		2	51-6	Adjusting shim		2
8	Cable clamp		1	51-7	Output shaft		1
9	Connector		2	51-8	Bearing		1
10	Connecting wire		1	52	Copper strip		1
11	Connecting wire		1	53	The female terminal		1
12	Button spring		1	54	Heat shrinkable tube		25mm
13	Switch button		1	55	Heat shrinkable tube		25mm
14	Lock off button		1	56	Dust shield		1
15	Button spring		1	57	Self tapping screw		3
16	Intermediate connecting rod		1	58	Flange bolts		1
17	Self tapping screw		1	59	Brake spring		1
18	Power switch	NA Power switch kit 571067 EU Power switch kit 572391	1	60	Countersunk head screw	Bar pad kit 570965	4
19	Hexagonal nut		1	61	Brake bar dead plate	See item 60 kit 570965	1
20	Motor gear		1	62	Link switch		1
21	Motor gear bushing		1	63	Brake bar		1
22	Self tapping screw		4	64	Brake lever spring		1
23	Left housing		1	65	Flat washer		1
24	Flange bolts		2	66	Right chassis components		1
25	The left panel		1	66-1	Flange bolts		1
26	The rotor component		1	66-2	Clamp		1
26-1	Bearing		1	66-3	The sponge the mat		1
26-2	The rotor assembly		1	66-4	Flange bolts		2
26-3	Bearing		1	66-5	The right panel		1
27	The stator component		1	66-6	Self tapping screw		1
27-1	Stator screw		2	66-7	Clamp		1
27-2	Spring washer		2	66-8	Machine screw		1
27-3	Flat gasket		2	66-9	Right housing		1
27-4	Wind screen		1	66-10	Heat insulation washer		1
27-5	Stator		1	66-11	Self tapping screw		1
27-6	Motor back support		1	66-12	Countersunk head screw		2
27-7	Brush holder		2	66-13	Oil-out seal ring		1
27-8	Washer		2	66-14	Dead block		1
27-9	Hexagonal nut 4 d		2	66-15	Self tapping screw		2
28	Self tapping screw		4	67	PowerSharp Lever assembly	PowerSharp arm kit 570962	1
29	Motor rear cover		1	67-1	PowerSharp Lever spring	See item 67 kit 570962	1
30	Brush	NA Brush replacement kit 581884 EU Brush replacement kit 581885	2	67-2	PowerSharp Lever	See item 67 kit 570962	1
31	Brush holder clamp	See item 30 kit 581884	2	67-3			
32	Self tapping screw	See item 30 kit 581884	4	67-4	Stone assembly	See item 67 kit 570962	1
33	Connecting wire		2	67-5			
34	Connecting wire		2	68	The brake pads		1
35	Front handle		1	69	Machine with screw		1
36	Protective plate component		1	70	Clamp	Sprocket kit 570964	1
36-1	Self tapping screw		2	71	Self tapping screw	See item 70 kit 570964	1
36-2	Impact block cover plate		1	72	Tensioning spring	See item 70 kit 570964	1
36-3	Impact plate		1	73	Sprocket	See item 70 kit 570964	1
36-4	Preventer plate		1	74	Split washer	See item 70 kit 570964	1
37	Oil pump assy		1	75	Support plate		1
37-1	Worm gear tooth		1	76	Self tapping screw		1
37-2	Worm gear		1	77	Self tapping screw		2
37-3	Plunger support		1	78	Self tapping screw		10
37-4	Piston bush		1	84	Side cover assembly	Side cover kit 570968	1
37-5	Main part of oil pump		1	84-1	Side cover	See item 84 kit 570968	1
38	Oil pump tension spring		1	84-2	Axis with the spring	See item 84 kit 570968	1
39	Flange bolts		2	84-3	Adjusting knob	See item 84 kit 570968	1
40	Brake washer		1	84-4	Spring compression knob	See item 84 kit 570968	1
				84-5	Compression knob	See item 84 kit 570968	1
				85	18" Blade cover		1

CS1500 Part Guide